


COVER VALET™
THE CONSUMERS' CHOICE.
ROCK-IT
INSTALLATION INSTRUCTIONS

Step #1

Position your spa cover (in the closed position) on the spa, making sure all four corners are lined up with the corners on the spa.

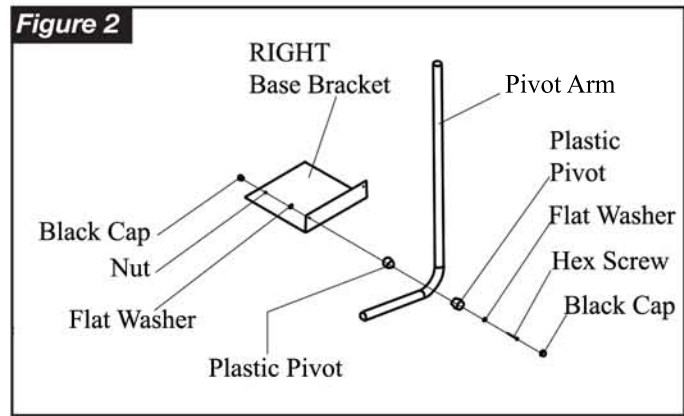


Step #2

Slide the Under-Mount Base Brackets under the spa. (See Fig. 1)

Note: Be sure to use the Pivot Hole closest to the back of the spa.

Step #3

Attach the Pivot Arms to the Base Bracket. (See Fig. 2) After arms are attached, tilt them to the upright/vertical position.

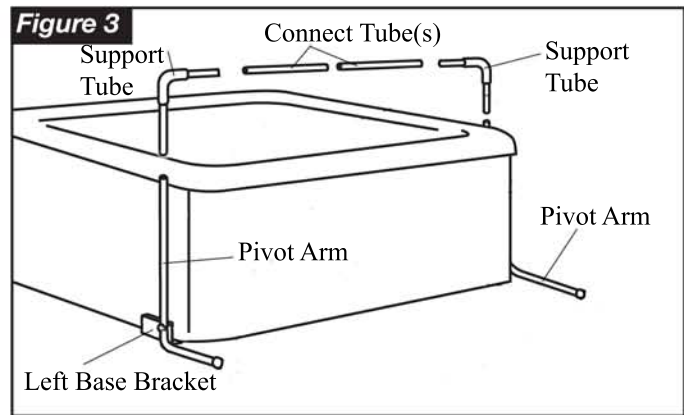


Step #4

Insert the LONG end of the Support Tube in to each Pivot Arm. (See Fig. 3) Next (depending on the size of your spa,) use 1 or both of the supplied Connect Tubes to join the Top Support Tubes.

Step #5

Lay the Cover Rock-it on the closed spa cover. Adjust and center the Connect Tube(s) and Support Arms so that the Connect Tube(s) is lying parallel to the spa cover's hinge about 1/2" away. (See Fig. 4)

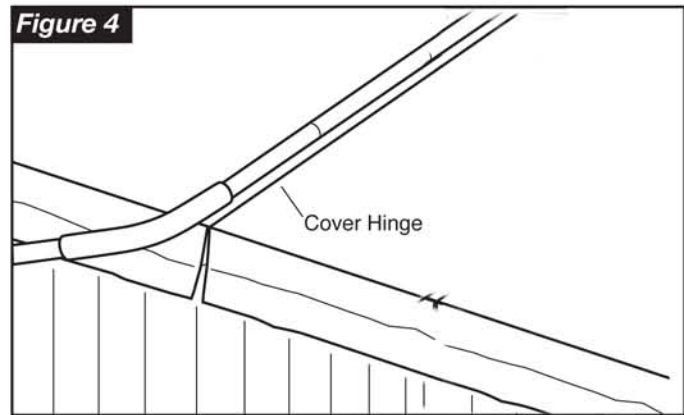

Use the Self Tapping Screws to fasten the Pivot Arms to the Support Arms and the Support Arms to the Connect Tube(s)

Note: The Support Tube should be rotated so that the Self Tapping Screws are horizontal so as not to damage the cover with the screw head.

CAUTION! DO NOT USE THE ROCK-IT IN HIGH WIND CONDITIONS (ABOVE 10 MPH.) SPA COVER CAN BLOW OVER AND DAMAGE PROPERTY OR CAUSE INJURY